

Herringbone : Laying Instructions



Conditions for installation :

The floor must be clean, flat and smooth.

The type of Underlay must be chosen to match the floor material.

Rules for installation are the same as for standard laminate flooring (expansion gap at the edge 8 mm, 24 hour storage of the product in the room in which it will be fitted prior to laying, etc.....)

Principal of installation:


The concept of installation is to use

- ***Either*** pre-made triangles
- ***Or*** to cut triangles the same size as the pre-made triangles.

Identification of Left and Right Planks





At present the Cartons and the rear of the planks are marked “Gauche” for Left and “Droit” for Right.

This will be changed to read “GAUCHE / LEFT” and “DROIT / RIGHT” .

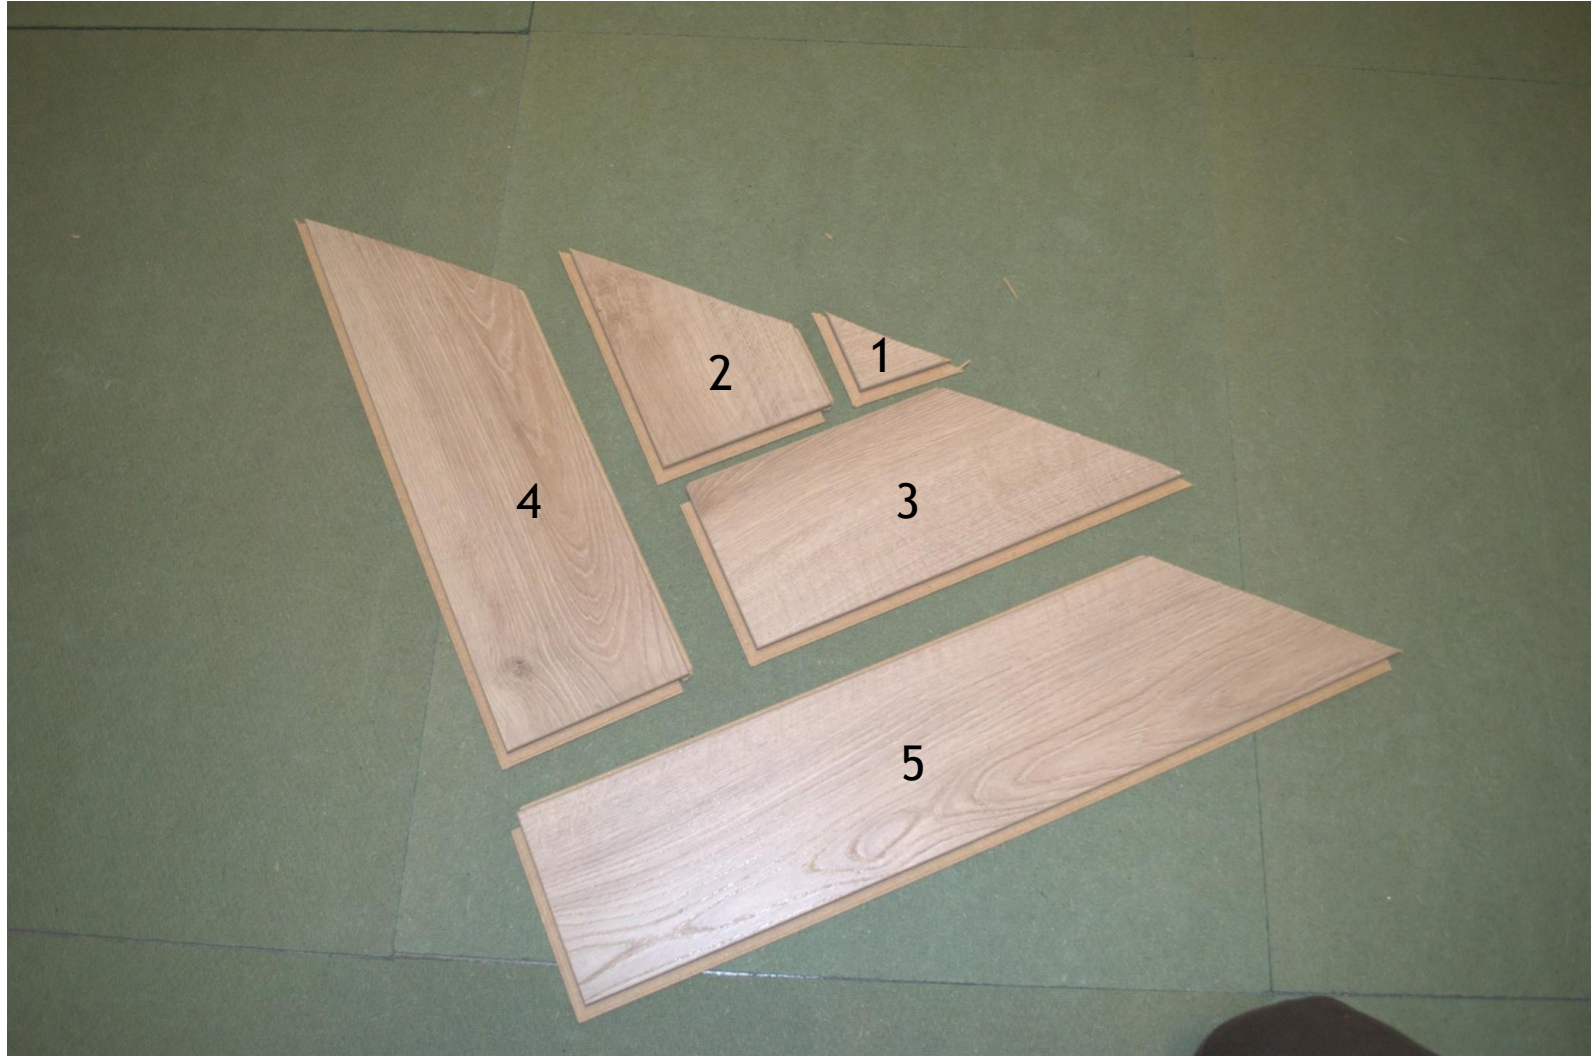

Pre-made Triangles

Pre-made triangles have been cut into pieces as shown. The assembly sequence is as numbers 1 - 5.

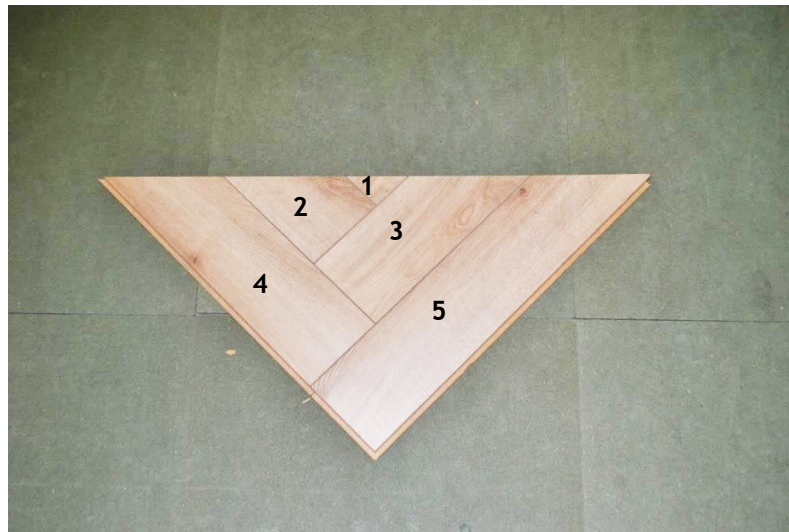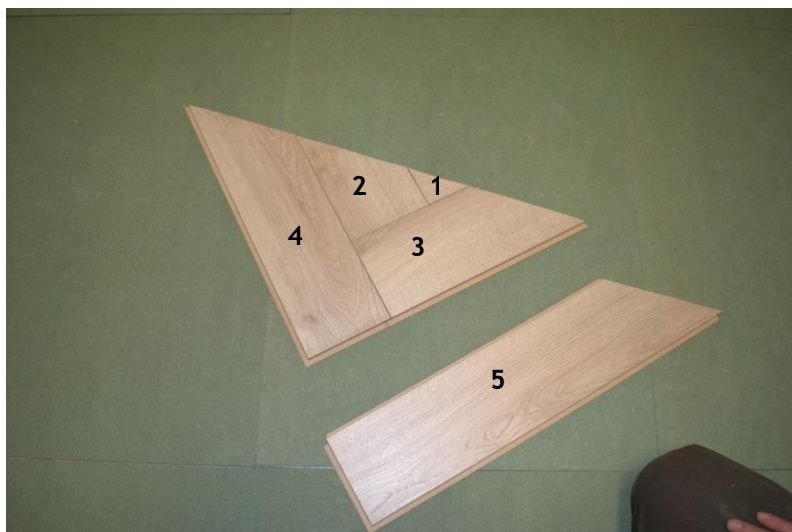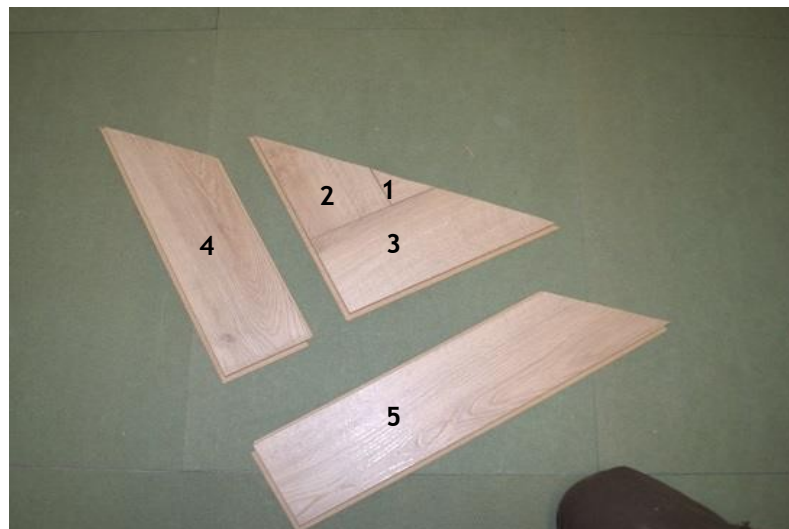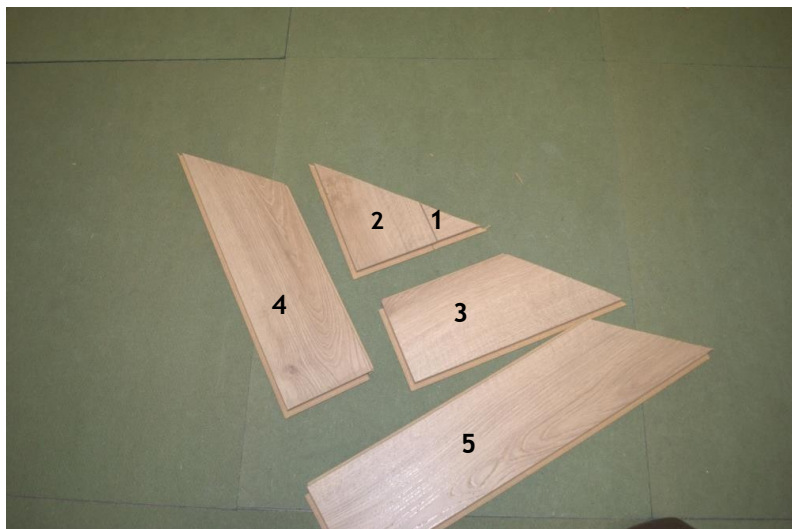


Assembly of pre-made Triangles

Assemble the pre-made Triangles in the sequence shown

To make Triangles





Use 2 Left planks and 3 Right planks. The planks are identified on the cartons and the rear of each plank with “Gauge” = Left and “Droit” = Right. This will be changed to “Left” and “Right” for UK product. The planks are positioned with the black plastic tongue pointing to the Left for Left Planks and to the Right for Right Planks.

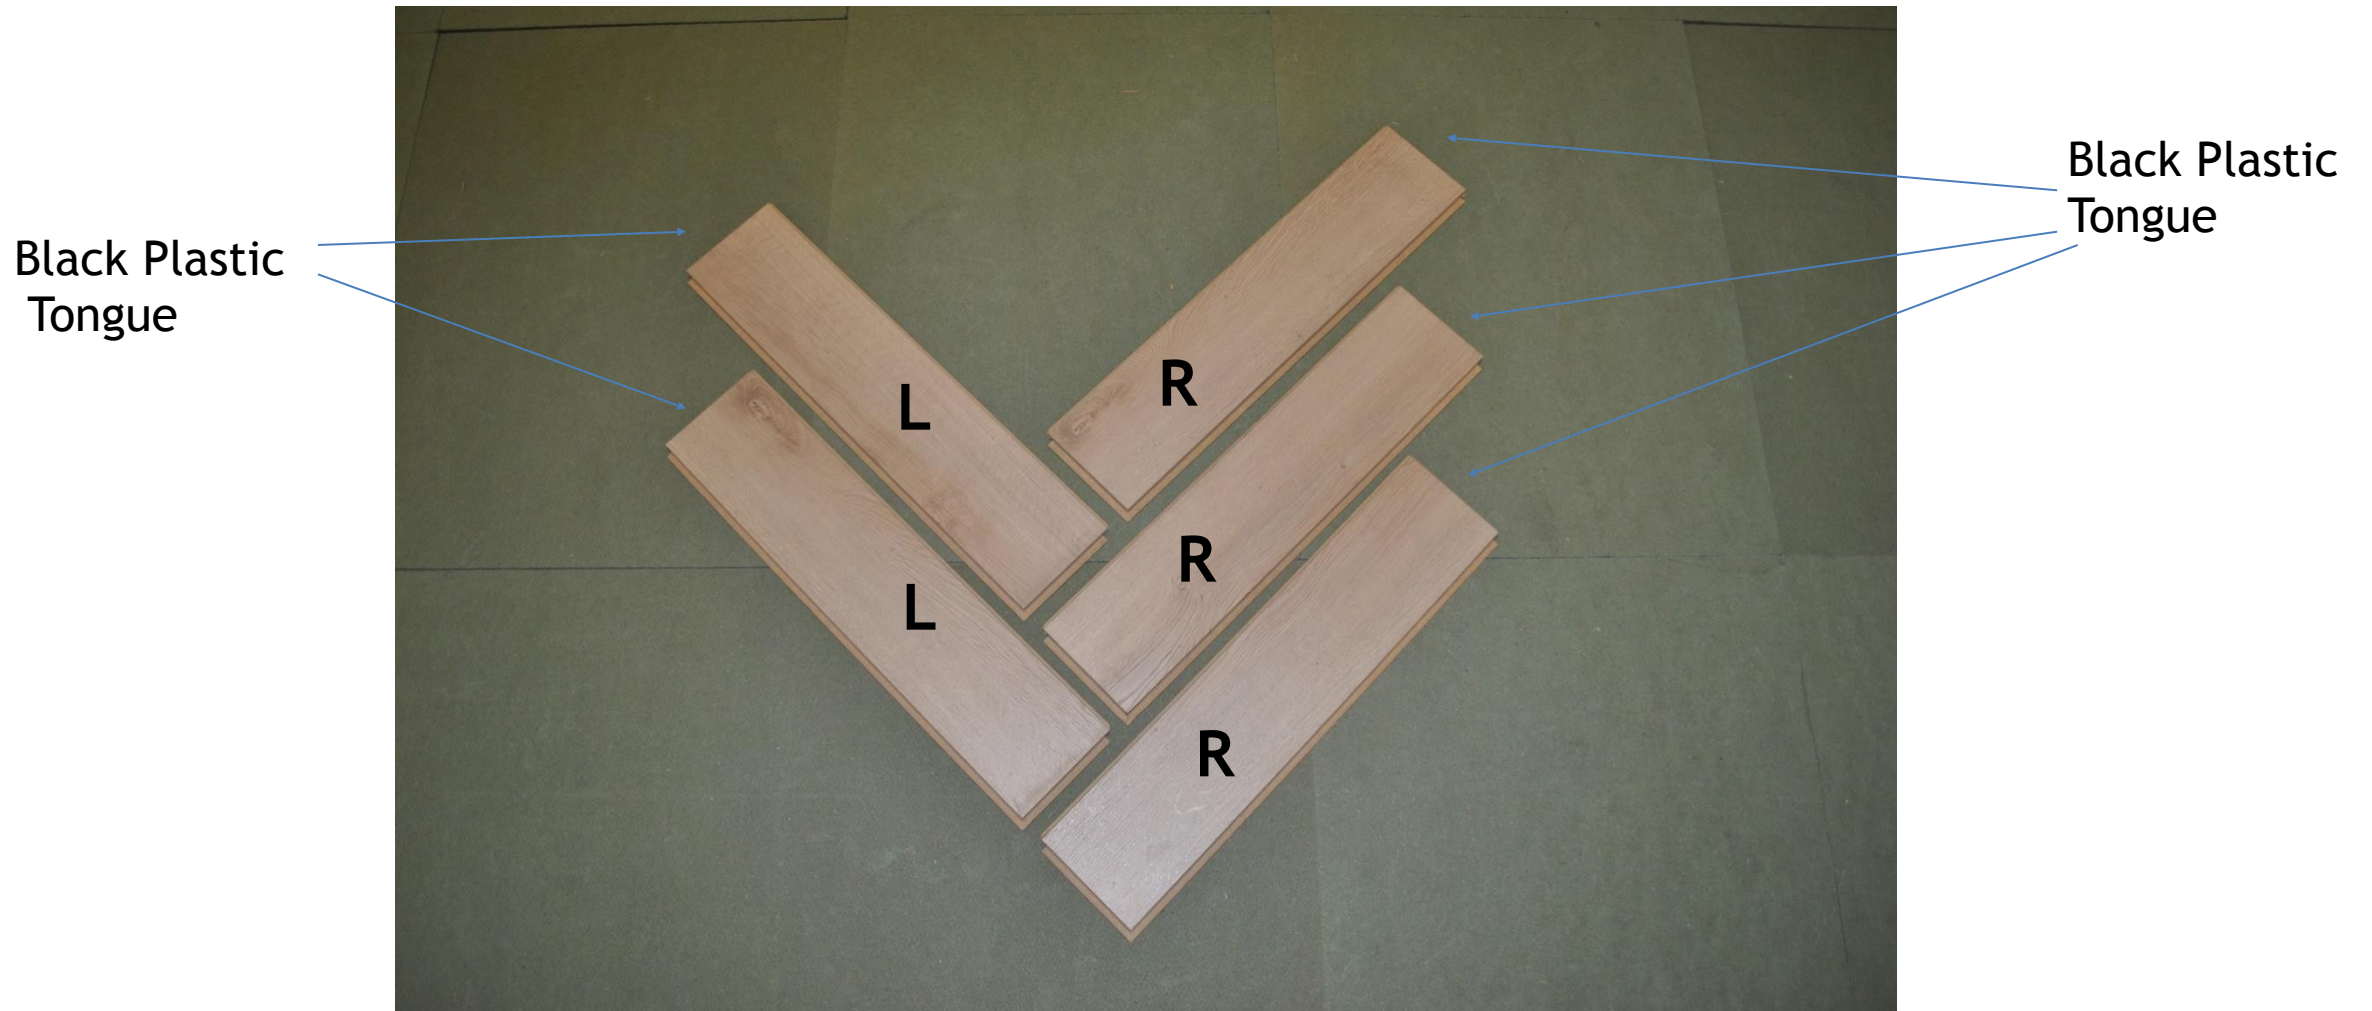


Assembly Sequence to make Triangles

The Cartons and the rear of the planks are currently identified with “Gauche” for Left and “Droit” for Right.

NB This will be changed to “GAUCHE / LEFT” and “DROIT / RIGHT”.

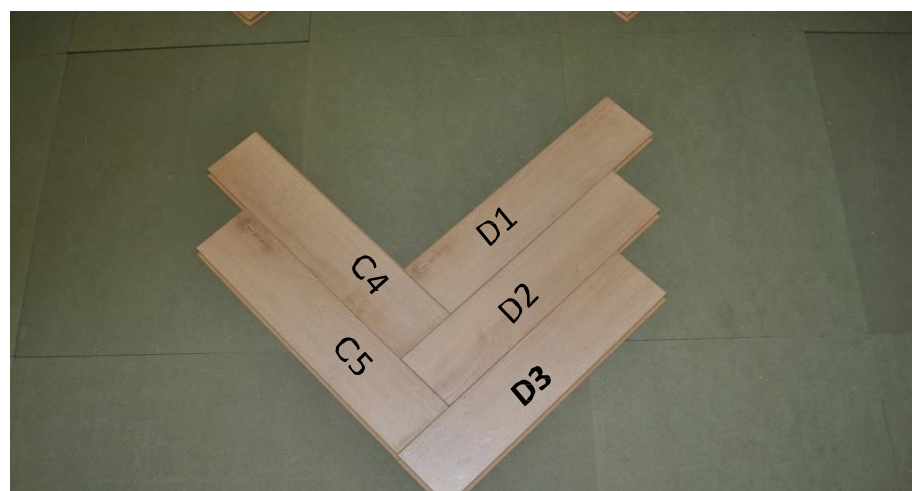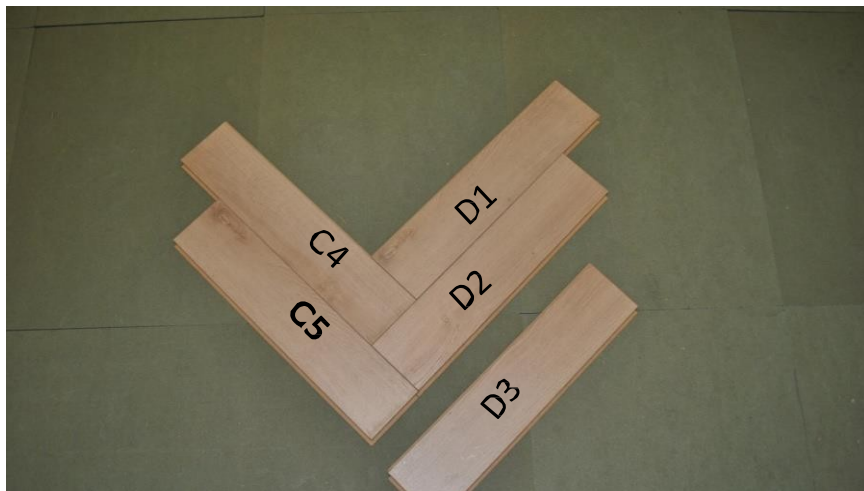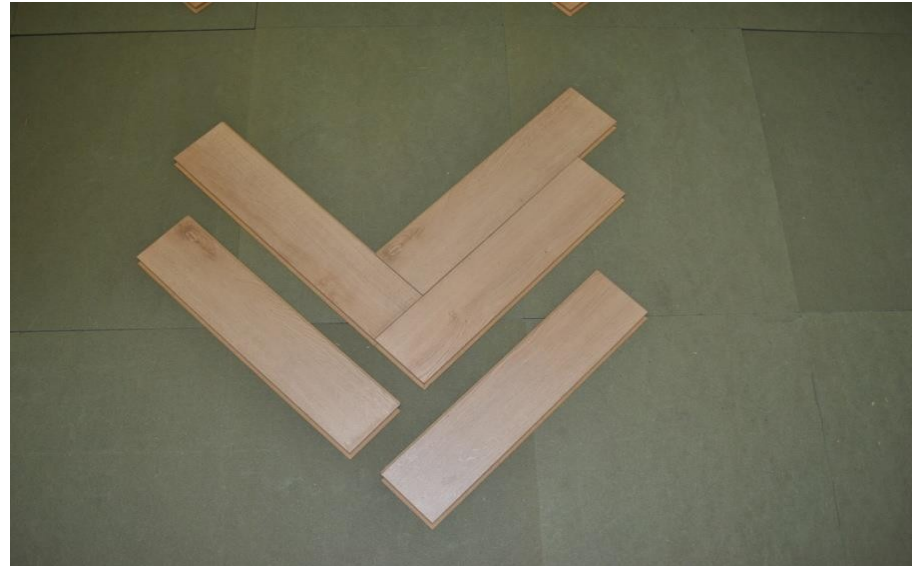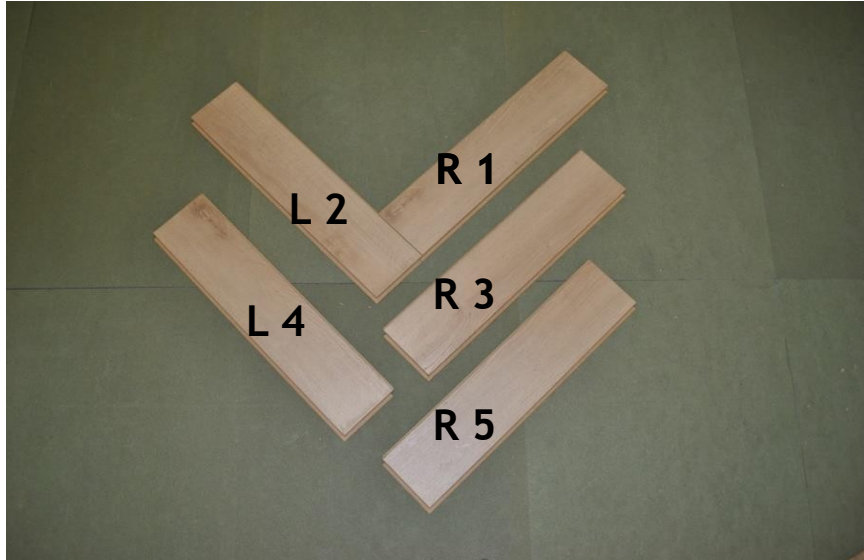


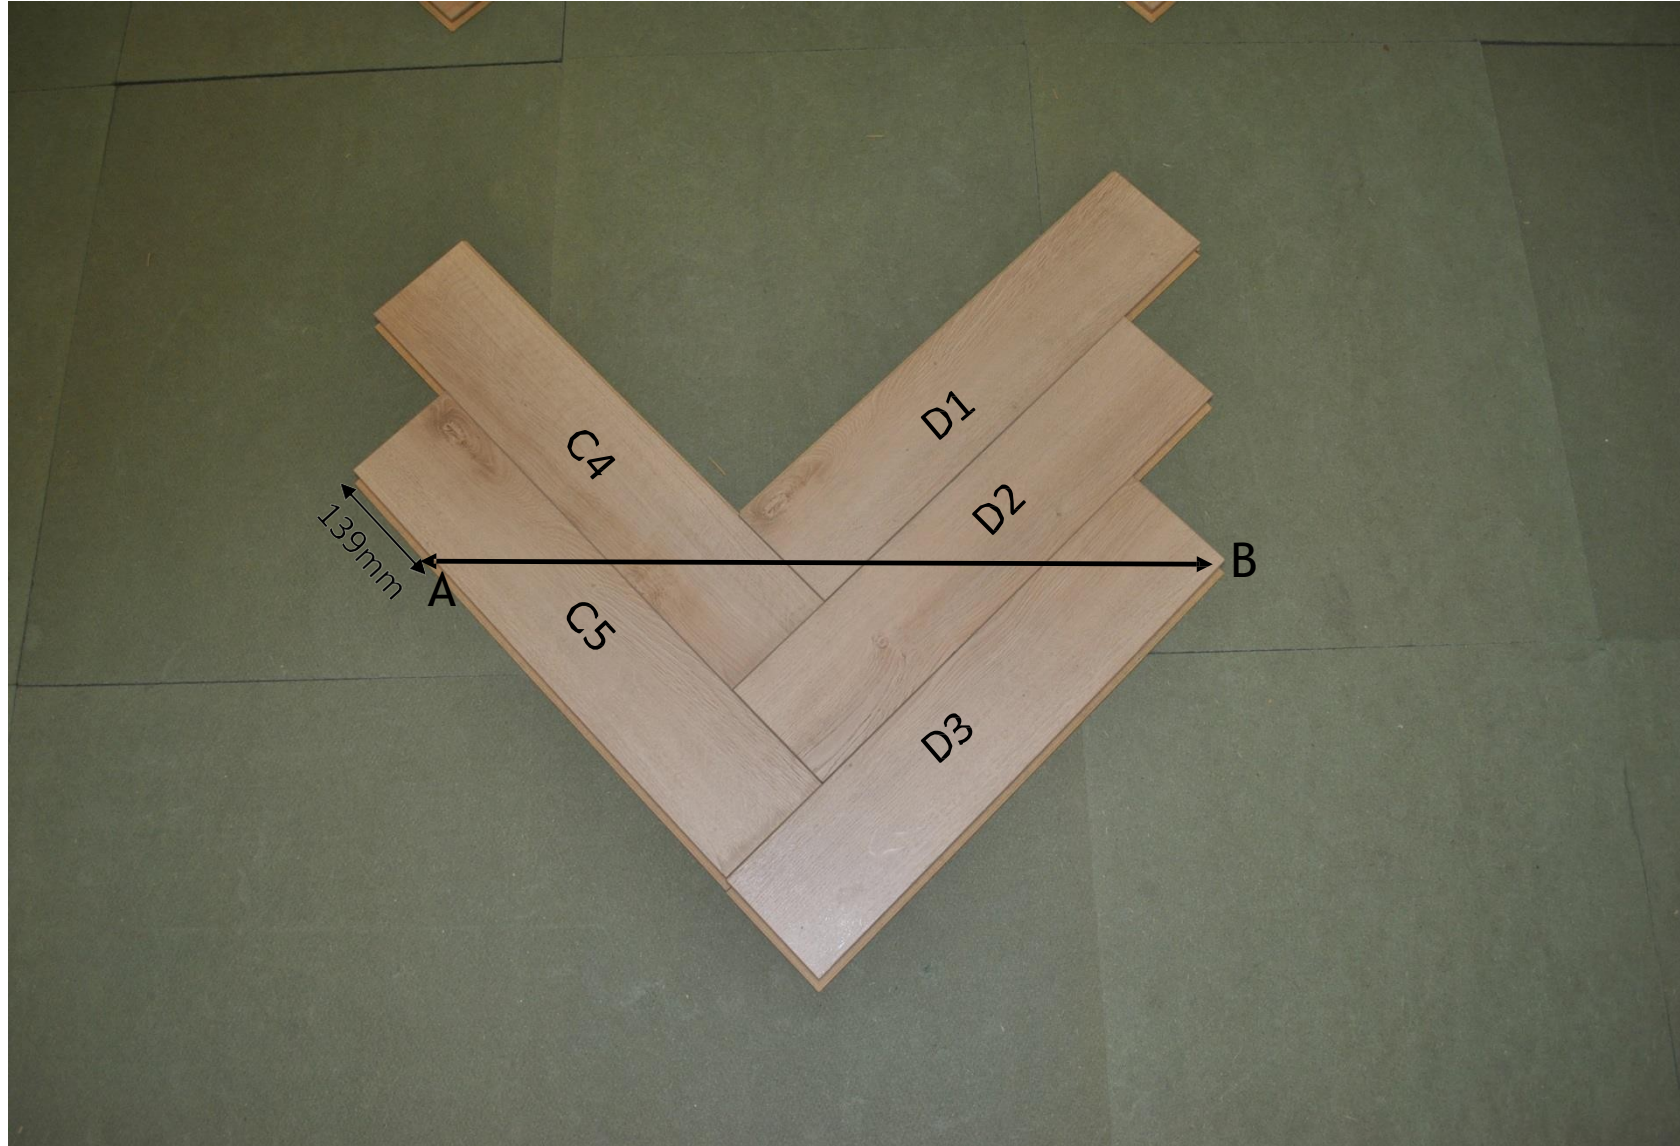

**Draw a Line from A - B
and cut the pieces
along this line.**



NB Once the first
triangle is cut it can be
assembled and used as
a template to mark out
the remaining triangles
required.

Use the appropriate number of complete triangles (T) to strike off from the wall.
The Triangles A and B will need to be cut to size.

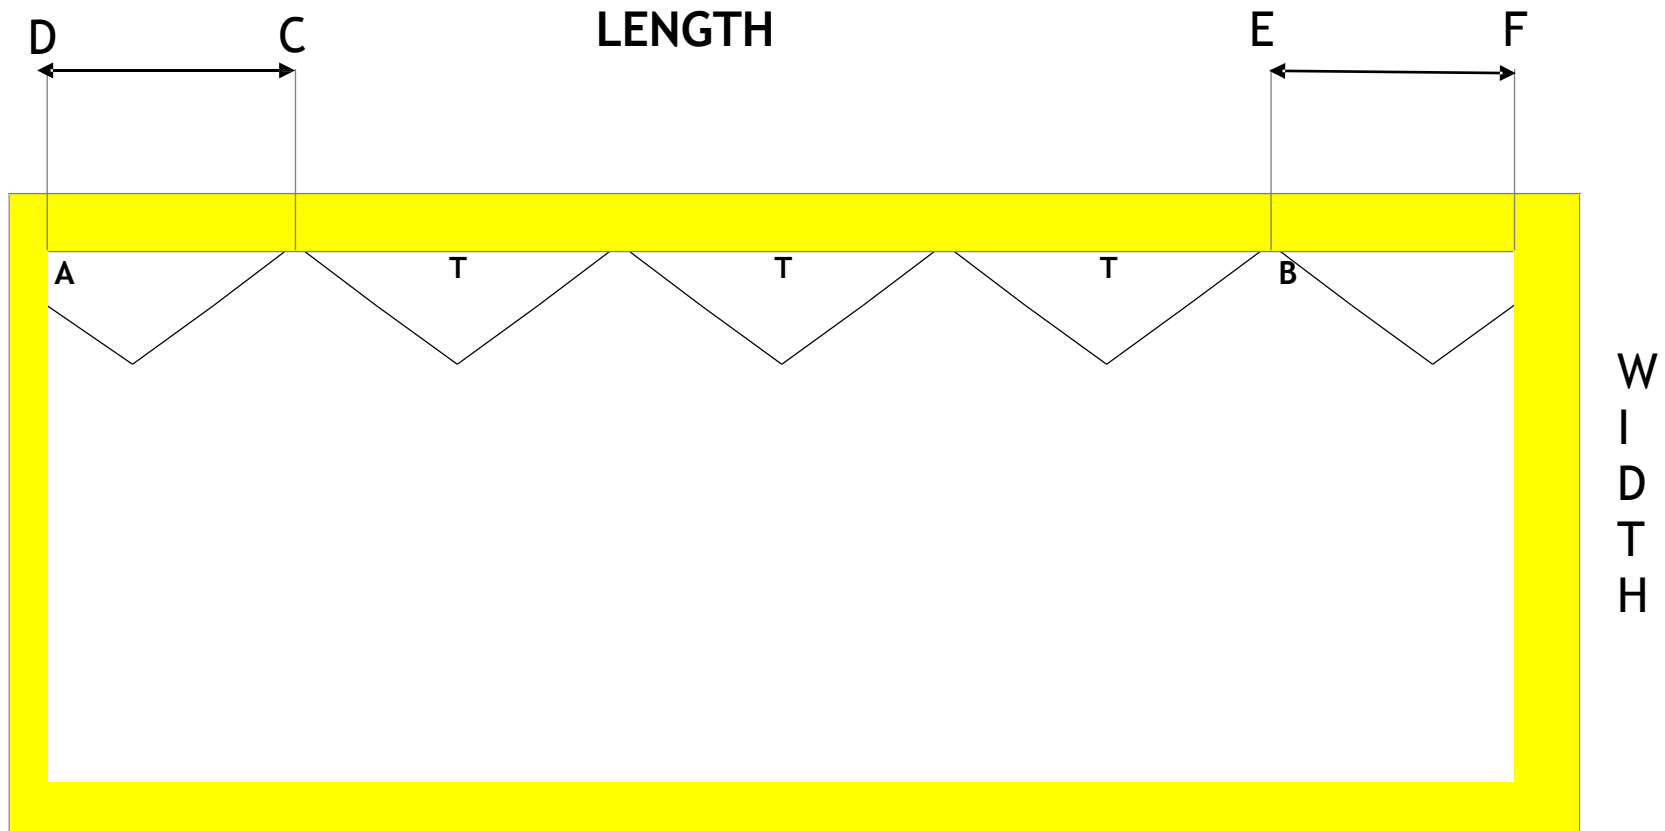



Cutting Triangle A

Measure the dimension CD and cut the triangle to size along DE

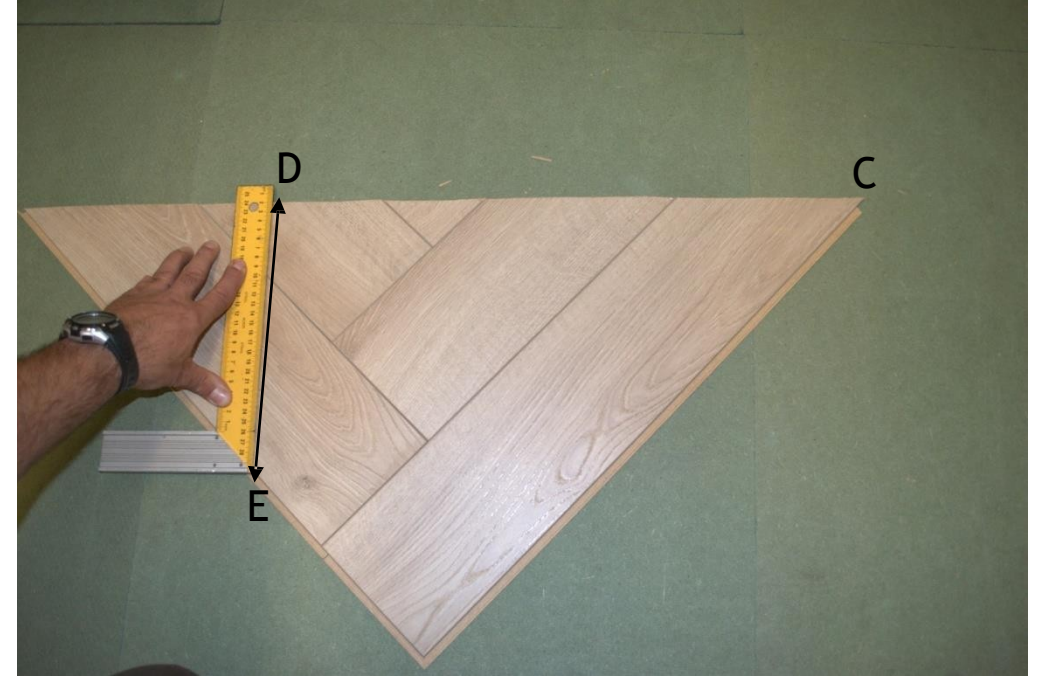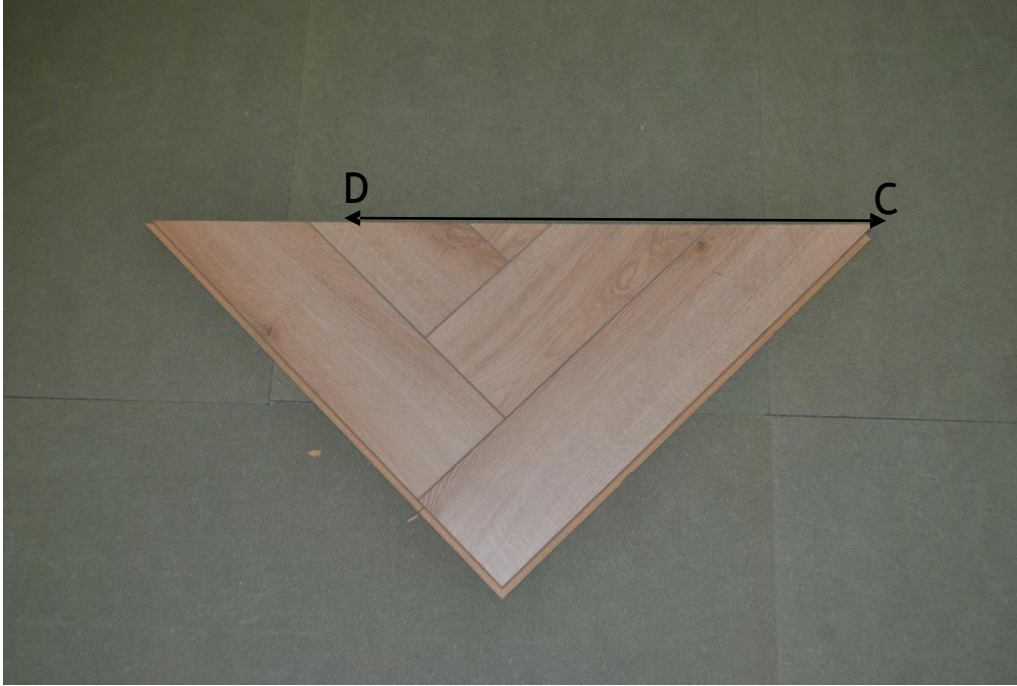


Cutting Triangle B


Measure the dimension EF and cut the triangle to size along FG.

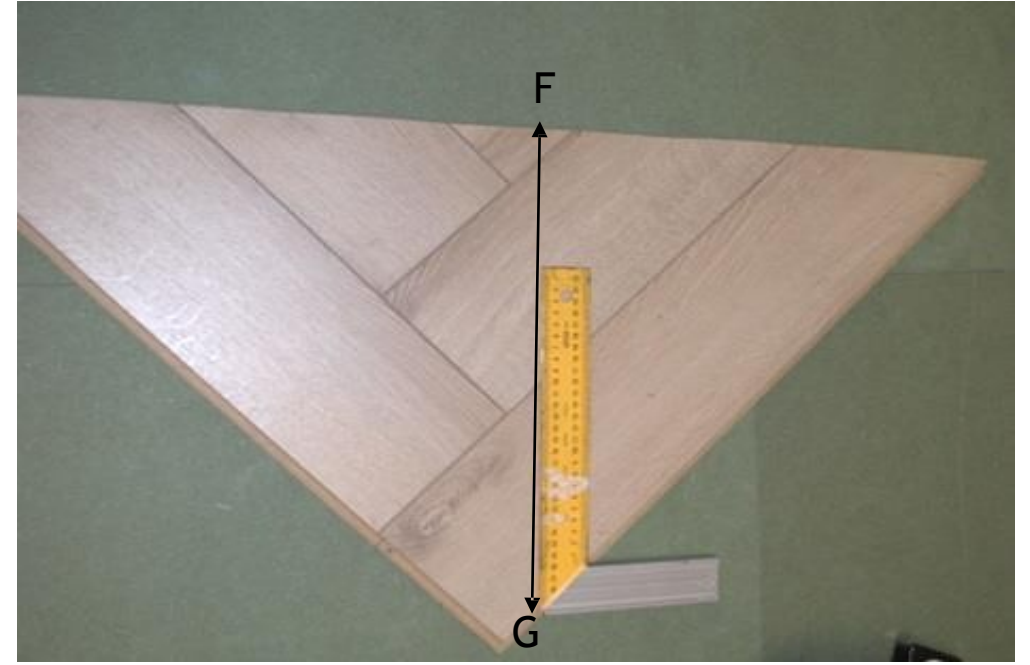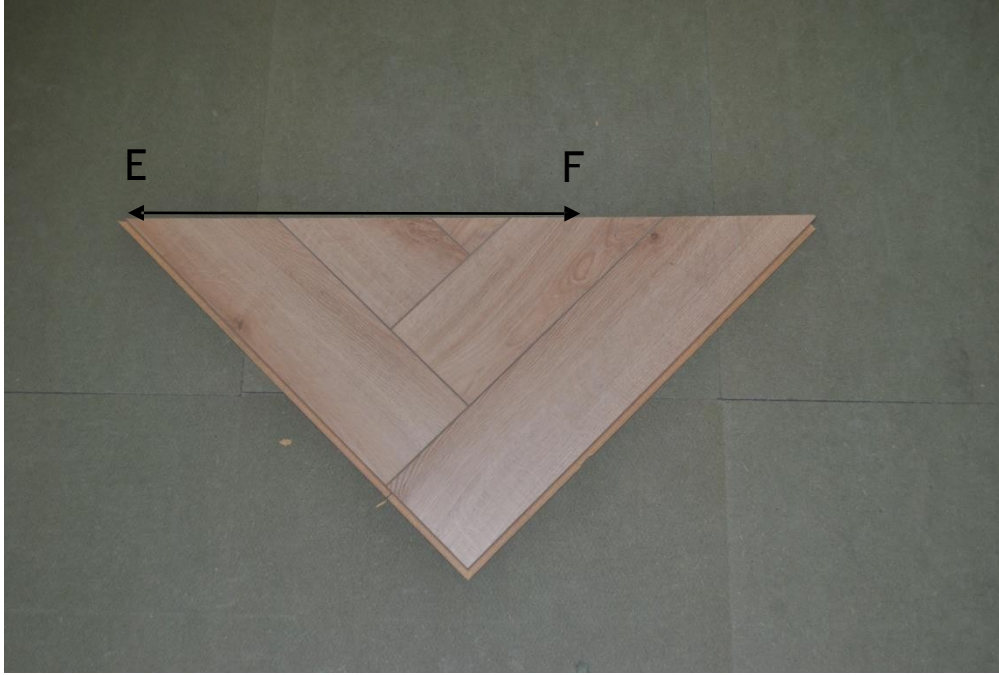


Position the Triangles starting with Triangle A on the Left

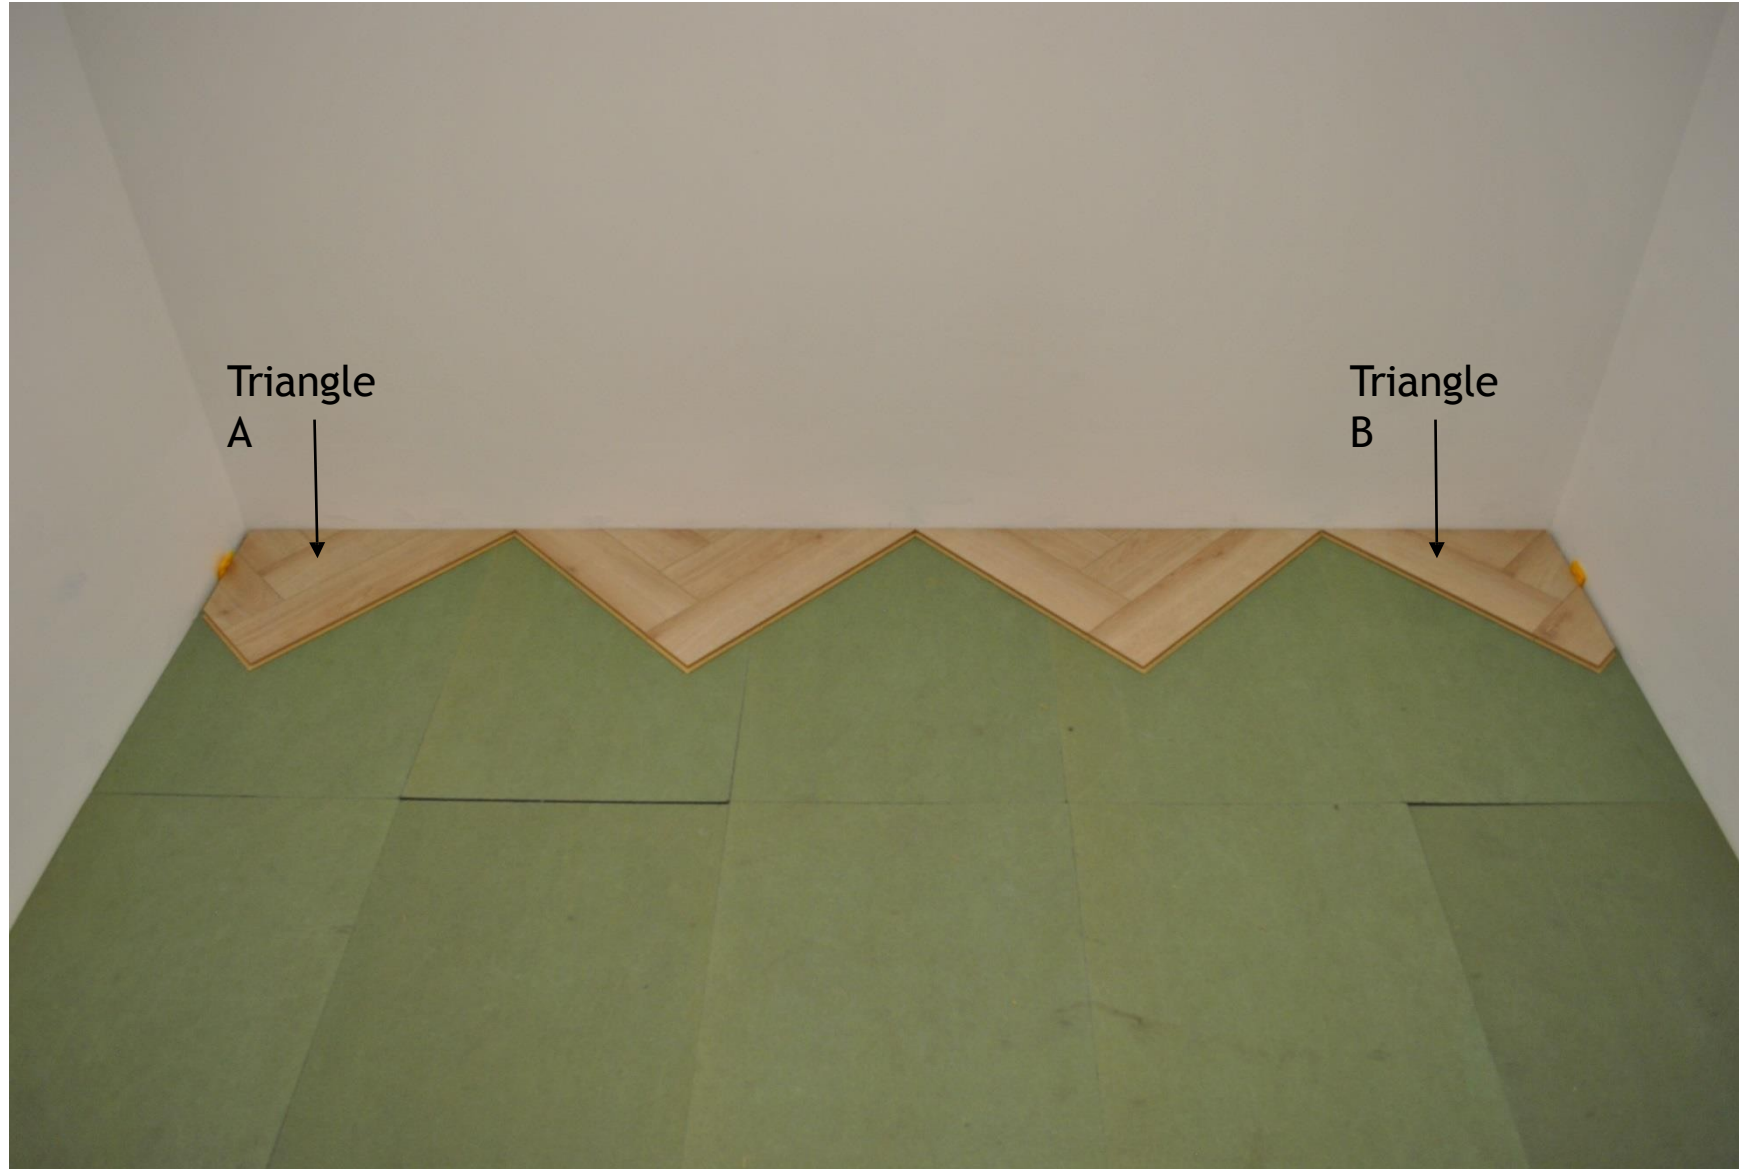

Install the first Left Planks
(marked “Gauche” = G)
with the Black Plastic
tongue pointing to the left

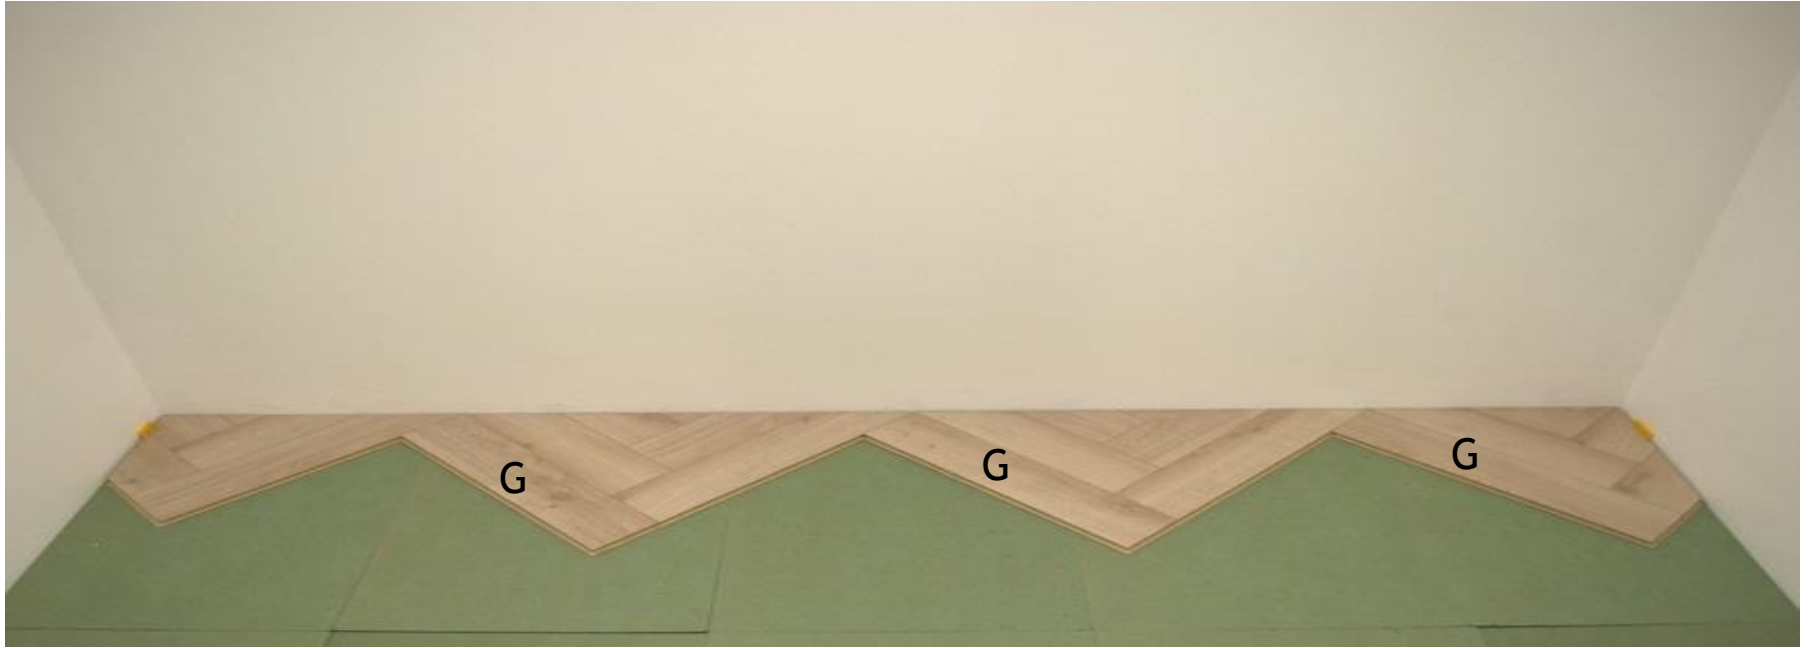


Next install the missing
Left Plank piece G1

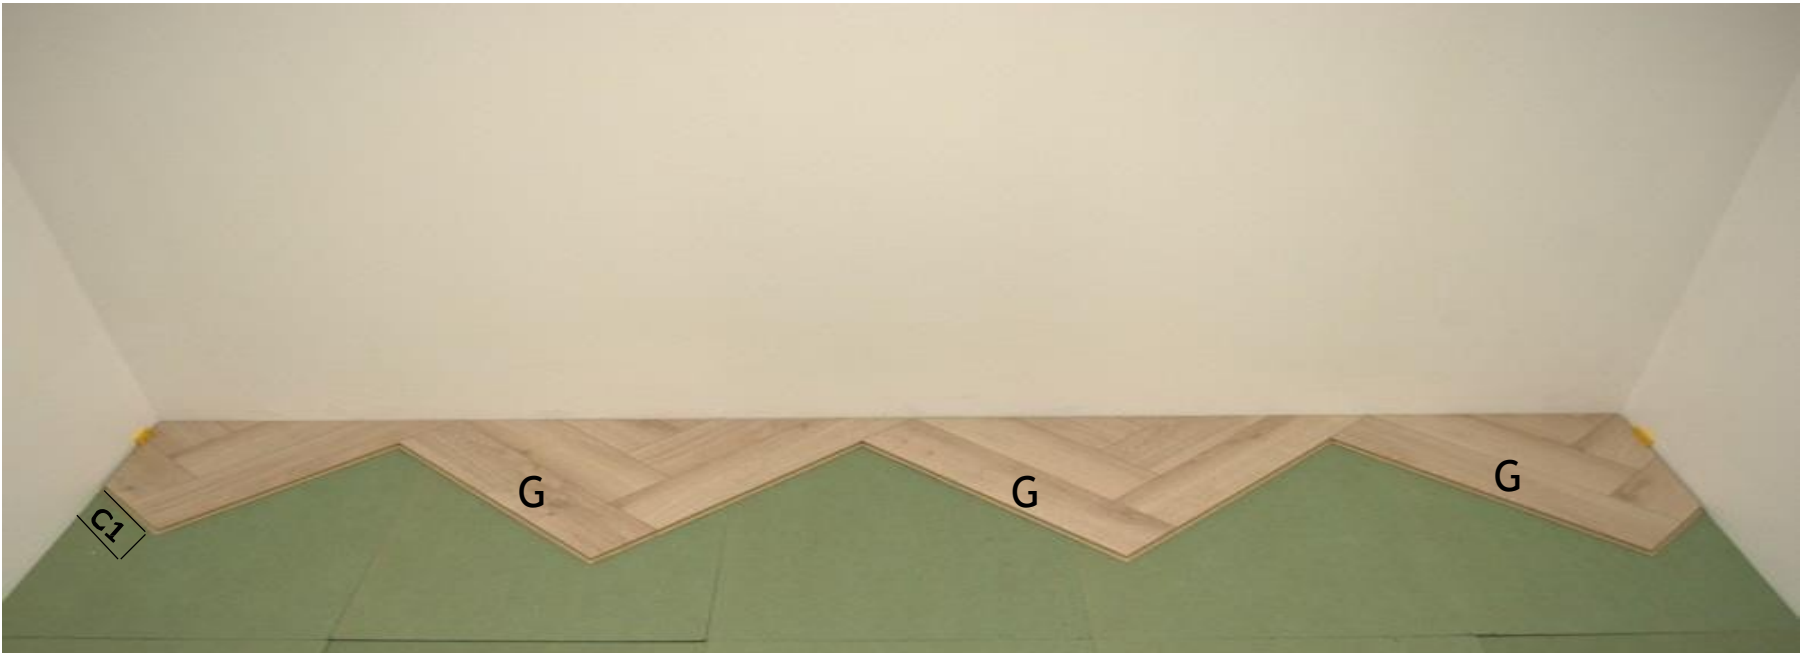

Measure and cut the piece G1



Installing the Right Planks (marked Droit = D)

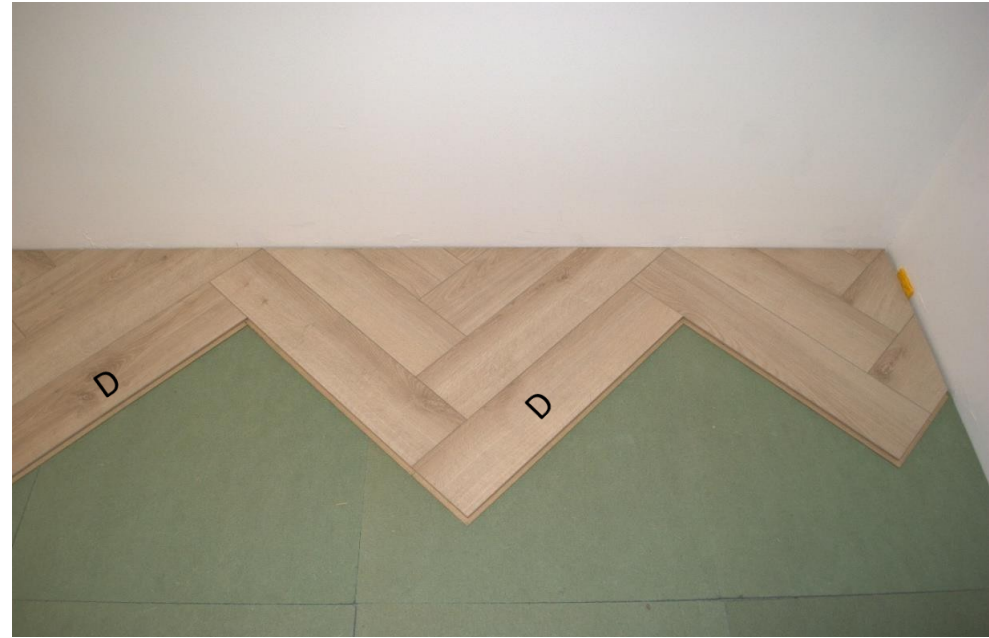

Measure the missing
Right Plank piece D1



Measure and cut the missing piece D1





Measure and fit the piece G2 (from
Left Plank)



Fit the remaining Left Planks
(G)



Fit Right Planks (D)

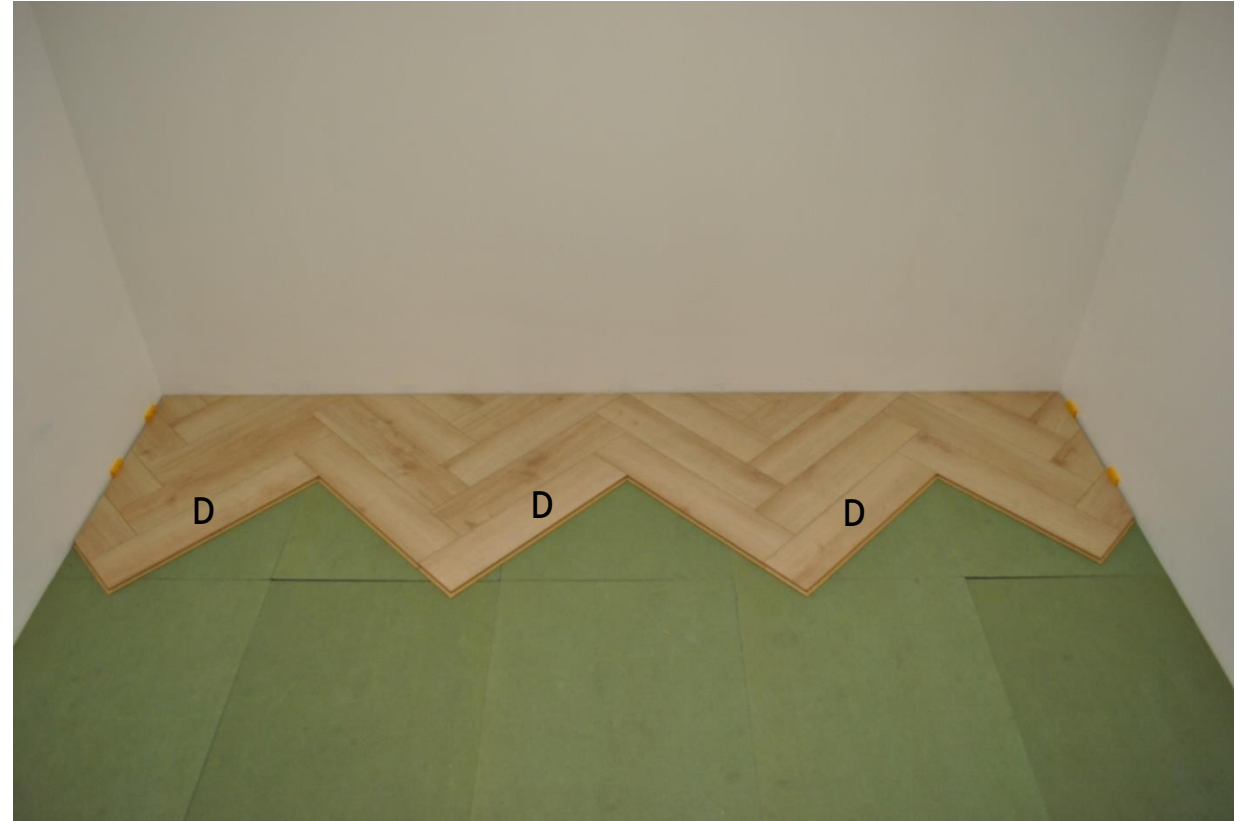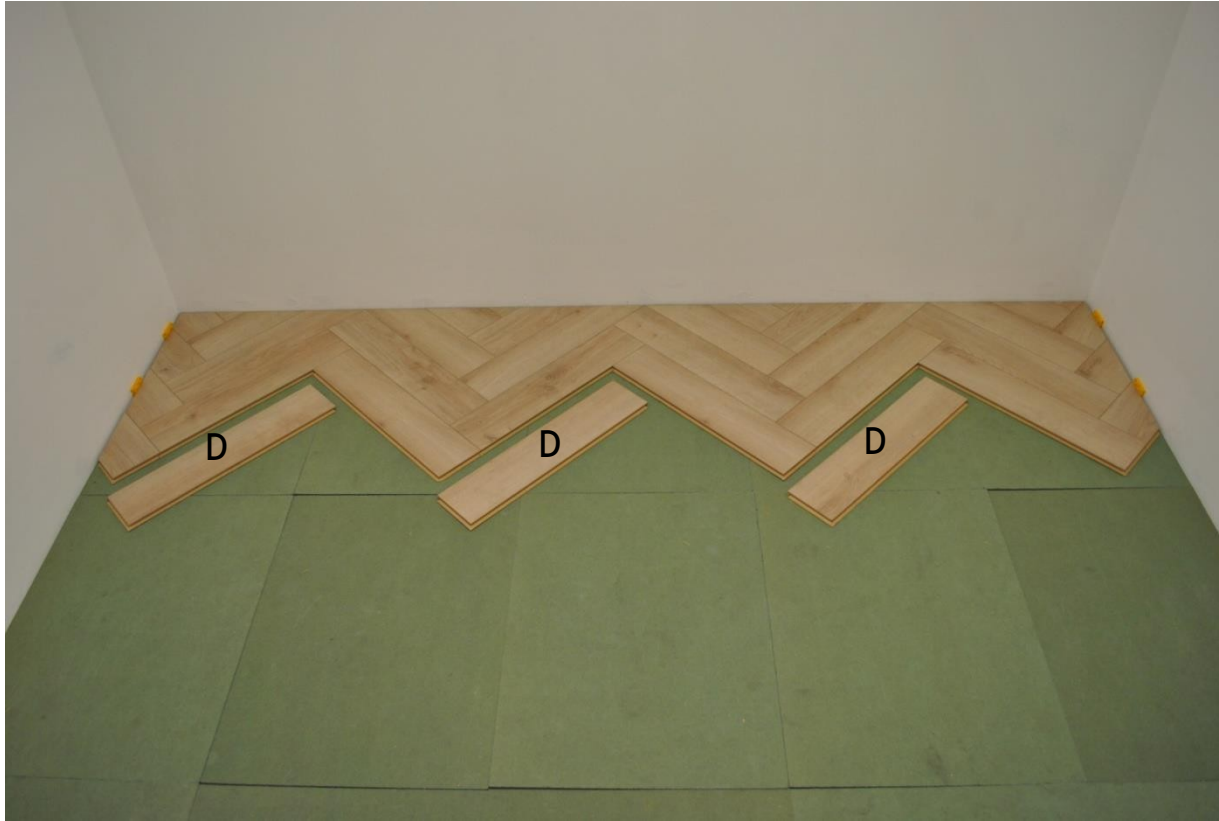

Measure, cut and fit Piece D2 (cut from a Right Plank)

